


## HUAWEI HG8245H ONT

1. Open the Run Program and type <http://192.168.1.1>

U can open the Run Program like this way



Click this button on the keyboard

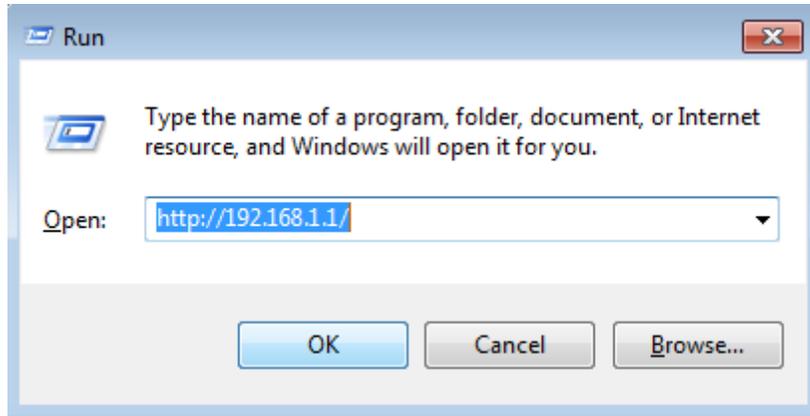

2. Enter ONT login U/N & P/W (user and user)



3. Go to **Quick Setup**, Enter ADSL U/N & P/W, which was given to you when you are getting the connection. Click **next** to continue.

The screenshot shows the Huawei HG8245H Quick Setup interface. The page title is "HG8245H" and the sub-header is "Quick Setup". The main content area is titled "PPPoE Account Configuration". It contains two input fields: "PPPoE Username:" and "PPPoE Password:". The "PPPoE Username" field contains the text "94xxxxxxx@sltbb". Below the input fields is a "Next" button. Arrows point from labels to the fields: "94xxxxxxx@sltbb" points to the username field, and "ADSL password" points to the password field.

4. Enter wireless configuration  
**Wi-Fi** should be **enabled**.  
**Wi-Fi SSID**- gives a name for a Wi-Fi connection  
**Wi-Fi Password**- enters a key. It should be more than 8 characters.  
Click **Next** to proceed

The screenshot shows the Huawei HG8245H Quick Setup interface for "Wireless Bandwidth Configuration". The page title is "HG8245H" and the sub-header is "Quick Setup". The main content area is titled "Wireless Bandwidth Configuration". It contains three input fields: "WiFi Enabled", "WiFi SSID:", and "WiFi Password:". The "WiFi Enabled" field has a checked checkbox. Below the input fields are "Previous" and "Next" buttons. Arrows point from labels to the fields: "Tick" points to the checked checkbox, "SSID" points to the "WiFi SSID" field, and "Preshared key" points to the "WiFi Password" field.

5. Click "**Apply**" to complete the configuration.

# HG8245H

## Quick Setup

Quick Setup > Quick Setup

**Configurations to Confirm**

PPPoE Username	941122123123@sltbb
PPPoE Password	Abcd123#\$%
WiFi Status	Enabled
WiFi SSID	sltbb
WiFi Password	sltsltslt